

Blumotion for Cabinets

Installation


The placement of the BLUMOTION for doors is effected by both the strength of the hinge and the weight of the door. For best results, test the placement before permanent installation.

Mounting options: A) Press BLUMOTION mechanism into the mounting adapter housing and screw into place. (Bracket should be flush with the leading edge of the cabinet. Small tabs on the housing help align on the cabinet edge). Or B) Drill 10mm diameter hole 50mm deep at the selected position and slide BLUMOTION mechanism into the hole. (Note: This method is only good for full overlay doors where you can drill a stopped hole, not a through hole)

To Test: Move the BLUMOTION housing along the edge of the cabinet and allow the door to close. Repeat the process until you locate the most desirable position.


For heavier or taller doors, the use of two BLUMOTION devices may be necessary.

Testing

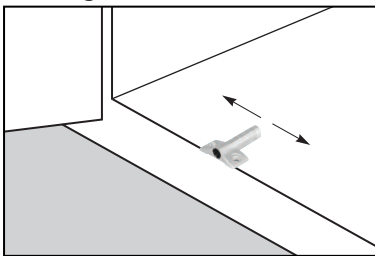


31680 - Full Overlay

Option B

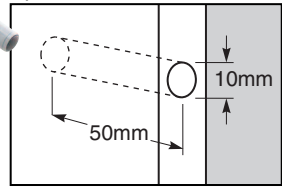


33057 - Face Frames

Option A

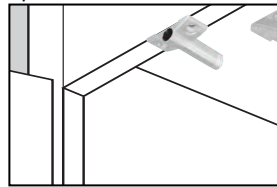


34427 - Double Doors

Option A

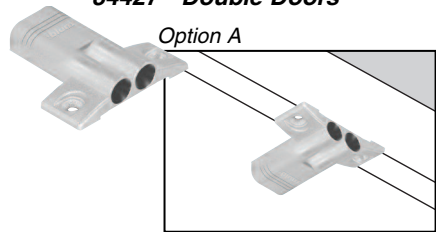

35003 - Inset

Option A

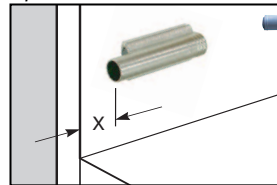

X = door thickness

31680
33057
34427
35003

ROCKLER®
WOODWORKING AND HARDWARE

© Rockler Companies Inc. 2004
RTD10311787AA