
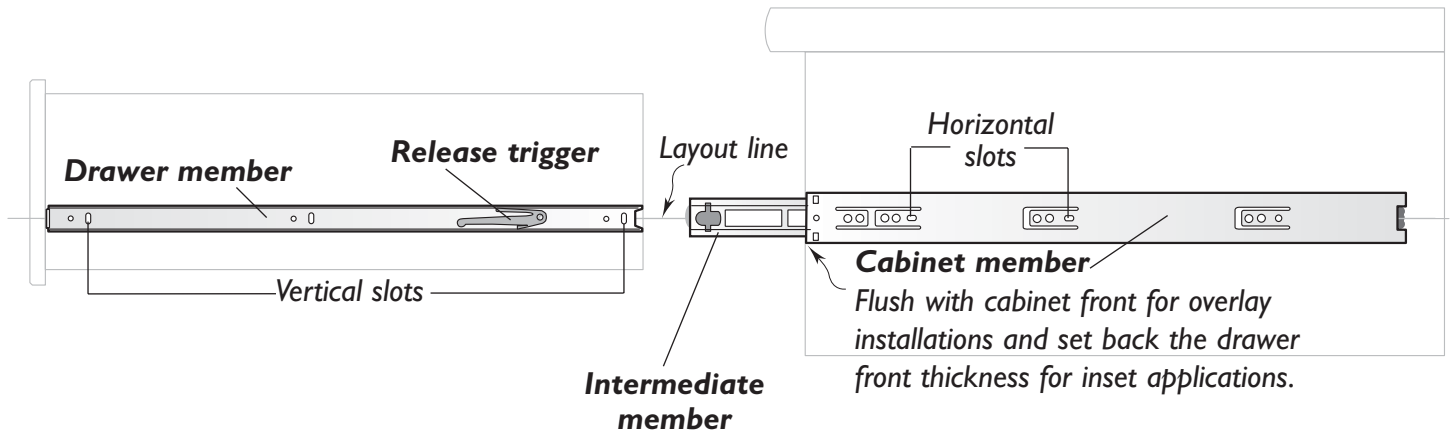


NOTE: Drawer needs 1/2" clearance on both sides to accommodate slides.

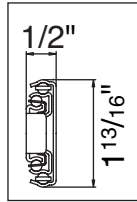

Full Extension Drawer Slide

Before installing the slides, separate the cabinet and drawer members. Note that the release trigger moves upward on the left hand slide, and downward on the right hand slide.

Install Cabinet Members First:

1. For **Overlay Drawer Fronts**, align the front of the cabinet member with the front edge of the cabinet.
2. For **Inset Drawer Fronts**, setback the front of the cabinet member the thickness of the drawer front.
3. Temporarily secure the cabinet member to the cabinet with screws in the front and back horizontal slots.

Install Drawer Member:

4. Align the front edge of the drawer member with the front edge of the drawer box.
5. Secure it to the drawer with screws in the front and back vertical slots.

Assemble the drawer:

6. Slide the intermediate member to the front of the cabinet member. Connect the drawer by inserting the drawer member between the ball bearings and carefully pushing the drawer until closed.
7. If necessary, adjust the height of the drawer using the vertical slots on the drawer member and the depth of the drawer by adjusting the horizontal slots on the cabinet member.
8. When all adjustments are complete, install additional screws in the holes on the cabinet and drawer members to lock the slide members in position. Two locking screws per member are recommended.