



### Corner Detail (Top View)

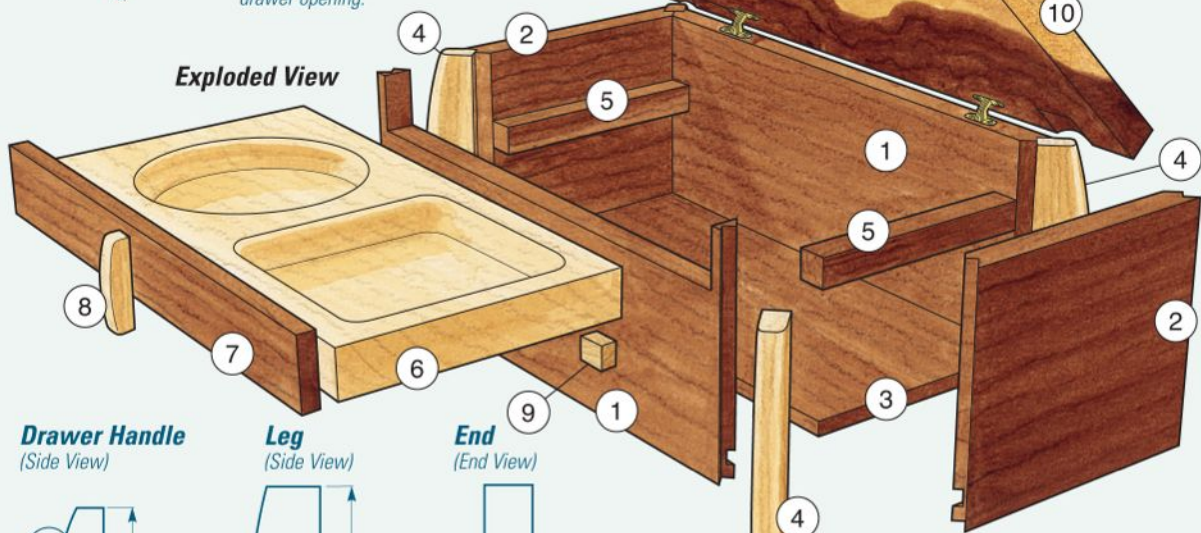


Once the box is glued up and the legs are installed, make a 1" deep cut aligned with the inside of the ends to start the drawer opening.


### Leg Mortise Detail (Bottom and Back Views)

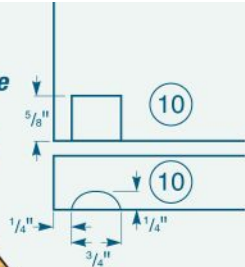

### Drawer Handle (Side View)

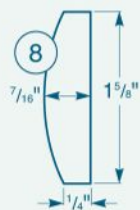


### Leg (Side View)

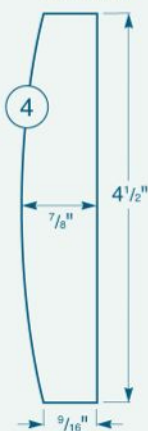

### End (End View)



### Drawer Body (Top View)

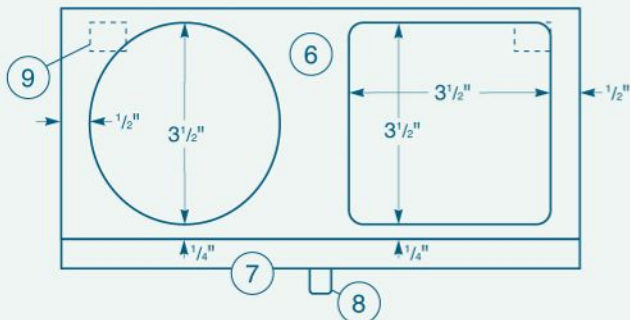

## MATERIAL LIST

	T x W x L
1 Sides (2)	1/2" x 4" x 10"
2 Ends (2)	1/2" x 4" x 5"
3 Bottom (1)	1/4" x 4 1/2" x 9 1/2"
4 Legs (4)	3/8" x 7/8" x 4 1/2"
5 Drawer Supports (2)	3/8" x 1/2" x 4"
6 Drawer Body (1)	3/4" x 4" x 9"
7 Drawer Face (1)	1/2" x 1" x 9"
8 Drawer Handle (1)	3/8" x 7/16" x 1 5/8"
9 Drawer Blocks (2)	1/2" x 5/8" x 5/8"
10 Top (1)	3/4" x 6 1/2" x 11 1/8"
11 Hinges* (2)	3/8" x 1" Brass

\* Specialty parts available from Woodworker's Journal

**Concealed Mini-Soss Hinges (Item #37428) . . . . \$17.99/pair**

To order products online, visit [www.woodworkersjournal.com](http://www.woodworkersjournal.com) and simply enter the item number shown above in the search bar. Or, you can call 800-610-0883 and mention Code #WE122.