


FEATURES:

- 1/2" diameter tip
- stick made from Crystolon
- 6" of dressing stick stores in sleeve of handle (pull out as wear occurs)
- 2" wooden knob on handle for firm gripping
- 10" long overall
- use on wheels #'s 75614, 74211, 74229
- made in US

APPLICATION:

Use for dressing grinding wheel stones.

SPECIFICATIONS:

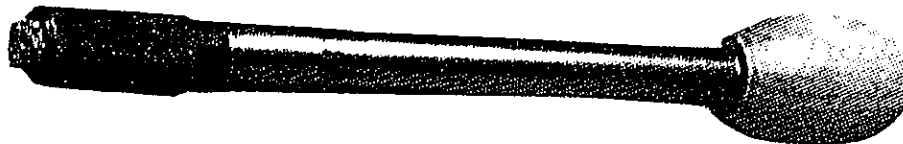

INSTRUCTIONS:

1. Loosen and remove grip ring.
2. Pull out stick as needed.
3. Replace and tighten grip ring.
4. Hold tip firmly against, grinding wheel to clean and remove residue.